




CLAMPS / GREASE / BOLTS


Bolt-on Boots

EMPI Universal Clamp Kit

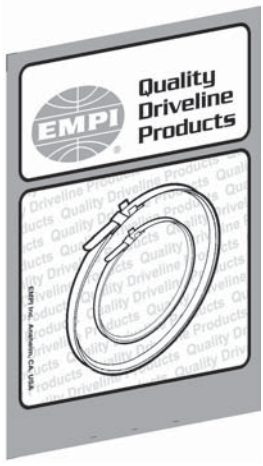


86-5795-0 Universal Clamp Kit, Pair
 1-365mm and 1-750mm Clamp (Skinpacked)

For Bulk Clamps please see page 108.

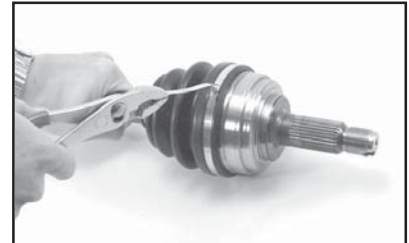

G.M. Boot Retaining Rings

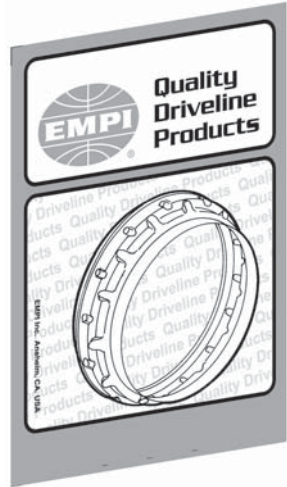

Bolt-on Boot Style C.V. Boot Kits are designed for installation without axle removal or disassembly. If not damaged, the original Retaining Rings should be reused. Installing new Retaining Rings requires axle removal and partial disassembly.

86-2000-C Small G.M. Boot Retaining Ring for "X", "J" Body etc.
Not included in EMPI Kits: 86-2852-C (Skinpacked)


86-2001-C Large G.M. Boot Retaining Ring for "E", "K" Body etc.
Not included in EMPI Kits: 86-2851-C (Skinpacked)

To ensure proper installation of these Retaining Rings, EMPI offers Installation Tools, which applies equal pressure around the Ring. (86-3018-0 used with 86-2000-C, 86-3019-0 used with 86-2001-C) See Page 113.



CLAMPS / GREASE / BOLTS

Bolt-On Boot Style C.V. Boot Hardware Kit

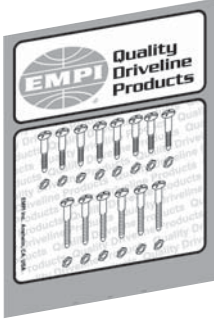

86-3190-C

This Kit contains all of the Nuts and Bolts necessary for any Bolt-On/Split Boot Style C.V. Boot Kit. **(Skinpacked)**

Bolt-on Boots

Moly Grease



86-3000-0

Moly Grease Packet for C.V. Joints, 4 oz. Packet, Printed Trilingual (Each). Supplied in EMPI Bolt-On Style C.V. Boot Kits

86-3005-0

Moly Grease for C.V. Joints, 3 oz. Packet, Printed Trilingual (Each)