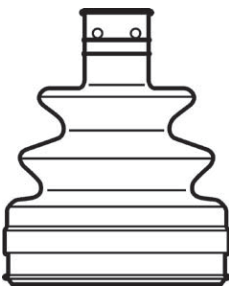
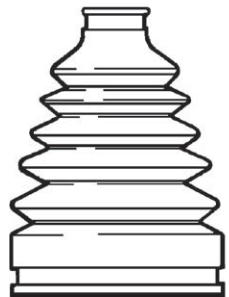
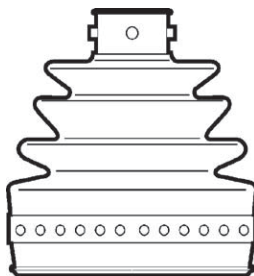
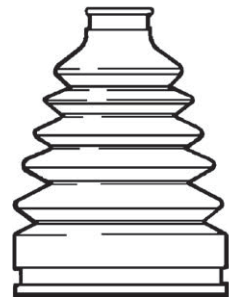
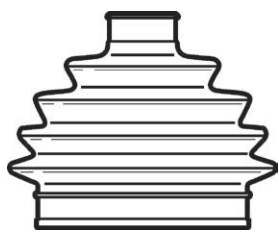
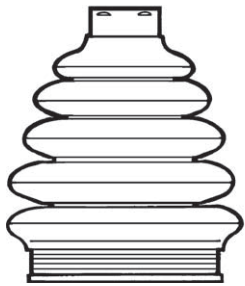

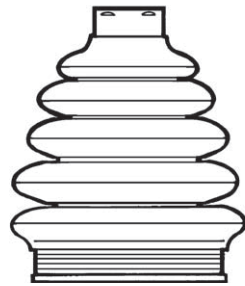
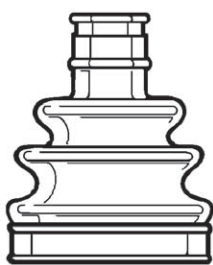
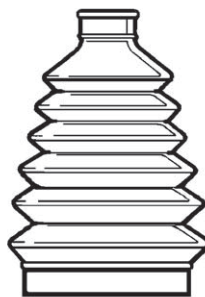
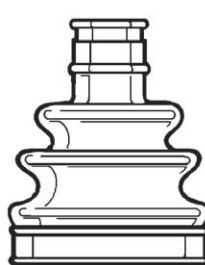
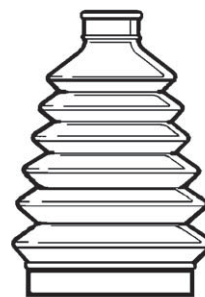
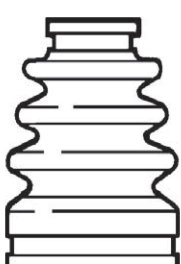
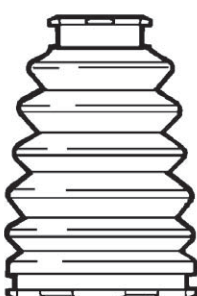
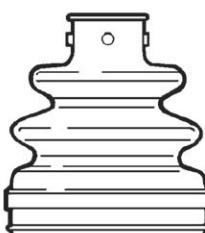
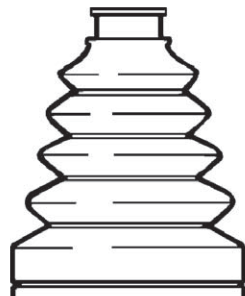




C.V. BOOT SUBSTITUTES

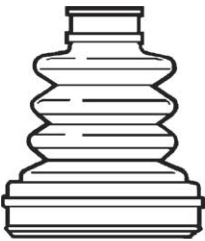
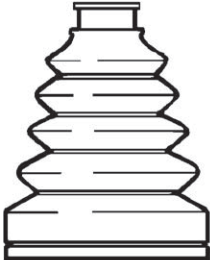

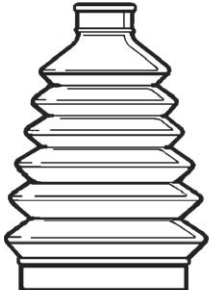
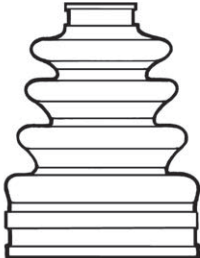
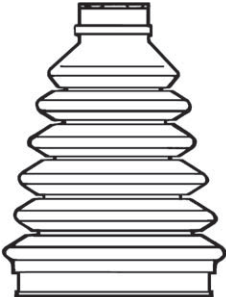
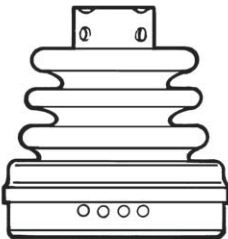
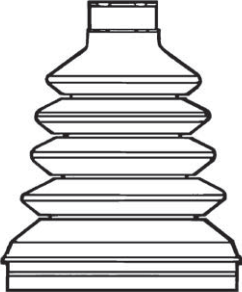
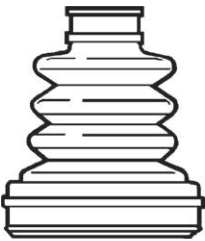
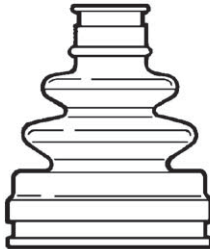

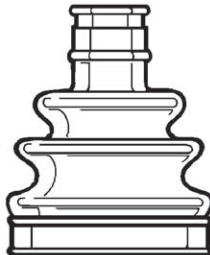
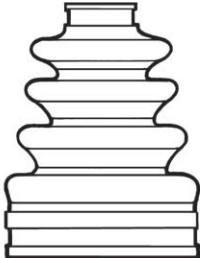
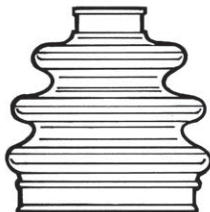
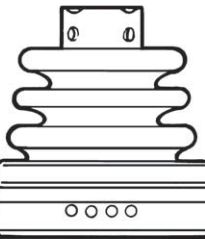
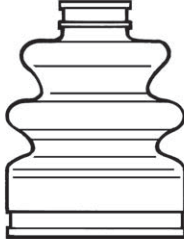
EMPI replaces Thermoplastic (Hard Plastic) Boots, both one piece and Inboard two piece Trilobal Boots (Boot & Adaptor), with a one-piece Neoprene Boot. The drawings shown below represent the physical differences (If any) between the OEM thermoplastic boot and the corresponding EMPI neoprene replacement boot. In all OEM applications, thermoplastic boots had trilobal adaptors, EMPI's neoprene boots are molded as one solid piece.

 86-1056	 OEM Thermoplastic	 86-1060	 OEM Thermoplastic
 86-1085	 OEM Thermoplastic	 86-1101	 OEM Thermoplastic
 86-2119	 OEM Thermoplastic	 86-2123	 OEM Thermoplastic
 86-2166	 OEM Thermoplastic	 86-2215	 OEM Thermoplastic



C.V. BOOT SUBSTITUTES

EMPI replaces Thermoplastic (Hard Plastic) Boots, both one piece and Inboard two piece Trilobal Boots (Boot & Adaptor), with a one-piece Neoprene Boot. The drawings shown below represent the physical differences (If any) between the OEM thermoplastic boot and the corresponding EMPI neoprene replacement boot. In all OEM applications, thermoplastic boots had trilobal adaptors, EMPI's neoprene boots are molded as one solid piece.

 <p>86-2217</p>	 <p>OEM Thermoplastic</p>	 <p>86-2237</p>	 <p>OEM Thermoplastic</p>
 <p>86-2241</p>	 <p>OEM Thermoplastic</p>	 <p>86-2265</p>	 <p>OEM Thermoplastic</p>
 <p>86-2230</p>	 <p>OEM Thermoplastic</p>	 <p>86-2240</p>	 <p>OEM Thermoplastic</p>
 <p>86-2263</p>	 <p>OEM Thermoplastic</p>	 <p>86-2270</p>	 <p>OEM Thermoplastic</p>



C.V. BOOT SUBSTITUTES

EMPI replaces Thermoplastic (Hard Plastic) Boots, both one piece and Inboard two piece Trilobal Boots (Boot & Adaptor), with a one-piece Neoprene Boot. The drawings shown below represent the physical differences (If any) between the OEM thermoplastic boot and the corresponding EMPI neoprene replacement boot. In all OEM applications, thermoplastic boots had trilobal adaptors, EMPI's neoprene boots are molded as one solid piece.

