




C.V. BOOT SUBSTITUTES


Silicone vs. Neoprene.....Many rebuilders choose not to use silicone C.V. boots. Listed below are the neoprene replacements for the OEM silicone boots listed in our C.V. boot catalog.

Silicone	Neoprene
86-1055	86-1053
86-1057	86-1056
86-1061	86-1058
86-1069	86-1067
86-2109	86-2111
86-2110	86-2108
86-2114	86-2108

Silicone	Neoprene
86-2208	86-1193
86-2216	86-2215
86-2218	86-2217
86-2242	86-2165
86-2258	86-2192
86-2298	86-1098
86-2415	86-1115

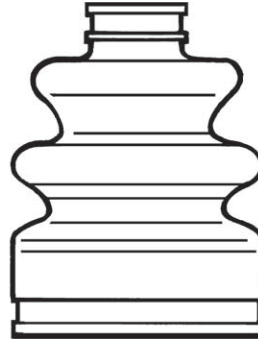

Silicone

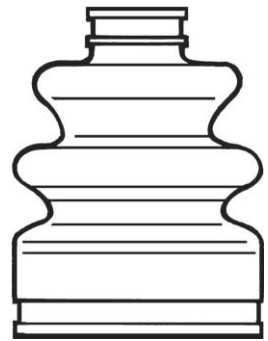

Neoprene Replacement

Design Variations			
<p>86-2148 OEM Design</p>	<p>86-2381* EMPI Design</p>	<p>86-2205 OEM Design</p>	<p>86-2123* EMPI Design</p>
<p>86-2326 OEM Design</p>	<p>86-2240 EMPI Design</p>	<p>86-2342 OEM Design</p>	<p>86-2119 EMPI Design</p>

Note: Part numbers with (*) next to it are listed in the buyers guide, but not in the application section.